

USER MANUAL

FOR WALL ENERGY LITHIUM STORAGE SYSTEM



MODEL: LEGACY-5KW/10KW

VOLTAGE: 48V/51.2V

Contents

1. Safety Precautions	- 2 -
1.1. Before Connecting	- 2 -
1.2. During operation	- 2 -
2. Battery Specifications	- 3 -
3. Introduction to the Series battery	- 4 -
3.1. Key Features	- 4 -
3.2. Interface Introduction	- 4 -
3.3. SOC Indicator & Status Indicator Guides	- 5 -
3.4. Connectors	- 6 -
3.5. Wake Up button	- 6 -
3.6. Display function instruction	- 6 -
4. Safe handling guide	- 8 -
4.2. Safety Gear	- 9 -
5. Installation	- 9 -
5.1. Inventory of items	- 9 -
5.2. Installation Location	- 9 -
5.3. Installing the Battery Pack	- 11 -
5.4. Parallel use of battery	- 11 -
6. Communication	- 12 -
6.1. Battery and PC communication(note:insert the RS232 port)	- 12 -
6.2. How To Connect Inverter	- 13 -
7. Abnormal situation handling	- 21 -
8. Product Responsibilities and Consulting	- 22 -

1.Safety Precautions

- It is very important and necessary to read the user manual carefully before installing or using the battery. Failure to follow any of the instructions or warnings in this document can result in electrical shock, serious injury, death, or may damage the battery and the whole system.
- If the battery is stored for a prolonged time, it is requirement that they are charged every three to six months, and the SOC should be no less than 80%.
- The battery needs to be recharged within 12 hours, after fully discharging.
- Do not expose cable outside.
- All battery terminals must be disconnected before maintenance.
- Do not use cleaning solvents to clean the battery.
- Do not expose the battery to flammable or harsh chemicals or vapors.
- Do not paint any part of the battery, include any internal or external components.
- Do not connect battery with PV solar wiring directly.
- Any foreign object is prohibited to be inserted into any part of the battery.
- Any warranty claims are excluded for direct or indirect damage due to items above.

1.1.Before Connecting

- After unpacking, please check the battery and packing list first, if the battery is damaged or spare parts are missing, Please contact the dealer.
- Before installation, be sure to cut off the grid power and make sure the battery is in the turned-off mode;
- Wiring must be correct, do not mix-connect the positive and negative cables, and ensure no short circuit with the external device;
- It is prohibited to connect the battery with AC power directly;
- The embedded BMS in the battery is designed for 48VDC, please DO NOT connect battery in series;
- It is prohibited to connect the battery with different type of battery;
- Please ensure the electrical parameters of battery system are compatible to inverter;
- Keep the battery away from fire or water.

1.2.During operation

- If the battery system needs to be moved or repaired, the power must be cut off first and the battery is completely shutdown;
- It is prohibited to connect the battery with different type of battery;
- It is prohibited to put the batteries working with faulty or incompatible inverter;
- In case of fire, only dry powder fire extinguisher can be used, liquid fire extinguishers are prohibited;
- Please do not open, repair or disassemble the battery. We do not undertake any consequences or related responsibility due to violation of safety operation or violating of design, production and equipment safety standards.

2. Battery Specifications

Battery Specifications		
Model No	5KWH-A161	10KWH-A162
<i>Nominal Parameters</i>		
Voltage	48V/51.2V	48V/51.2V
Capacity	100Ah	200Ah
Energy	4.8KwH/51.2KwH	9.6 KwH/10.24Kwh
Dimensions (L x W x H)	680 x480 x180(220)mm	680x480x180(220)mm
Weight	55kg/58kg	90kg/95kg
<i>Basic Parameters</i>		
Life time(25°C)	10 years	
Life cycles(80% DOD, 25°C)	6000Cycles	
Storage time / temperature	5 months @ 25°C; 3 months @ 35°C; 1 month @ 45°C	
Operation temperature	-20°C to 60°C @60+/-25% Relative Humidity	
Storage temperature	0°C to 45°C @60+/-25% Relative Humidity	
Lithium Battery Standard	UN38.3,MSDS,CE-EMC,IEC62619(cell),UL1973(cell)	
Enclosure protection rating	IP50	
Electrical Parameters		
Operation voltage	45-53.5 VDC/48-56VDC	45-53.5 VDC/48-56VDC
Max. charging voltage	53.5 VDC/56VDC	53.5 VDC/56VDC
Max. charging and discharging current	100A	100A
Max Power	4800W/5120W	4800W


3.Introduction to the Series battery

3.1.Key Features

- LiFePO4 composition – provides exceptional safety and longevity
- High safety and reliability
- 6,000cycles/10 year service life
- Consistent performance over wide temperature range
- Wall-mounted, convenient installation
- Integrated state-of-the-art BMS to manage and monitor battery information including voltage, current and temperature as well as balance cell charging/discharging rates
- 5-10 year warranty

3.2.Interface Introduction

- This section details the interface functions of front and back panel..
- Front interface:

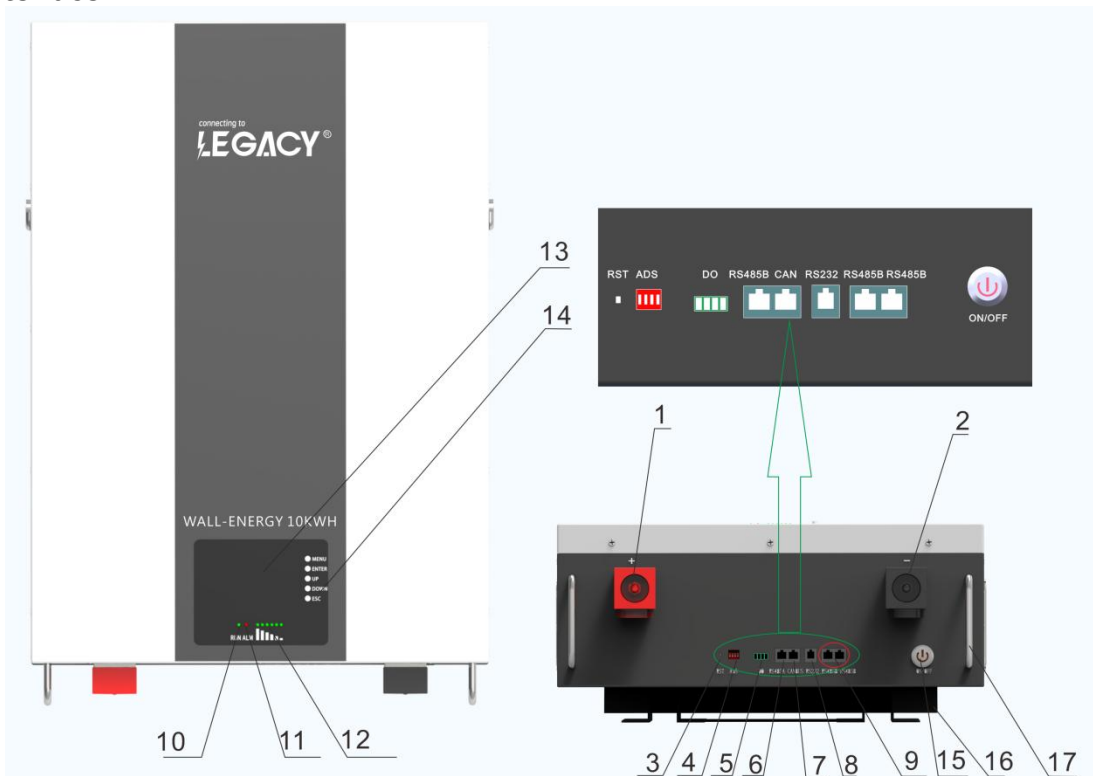

●No.	●Description	●Silk-screen	●Remark
●1	●UES0600	●P+ P+	●Output terminal
●2	●UES0600	●P- P-	●Output terminal
●3	●port Reset button	●RST	●For reset the batter
●4	●Dial switch	●ADS	●Set the address
●5	●Do	●	●
●6	●RS485A Port	●RS485	●RS485 and inverter connection port
●7	●CANbus Port	●CANbus	●CANbus and inverter connection port

●8	●RS232 Port	●RS232	●RS232 communication port
●9	●RS485B port	●RS485	●RS485 parallel communication interface
●10	●LED	●RUN	●Operation indicator
●11	●LED	●ALM	●Alarm indicator
●12	●LED	●CAPACITY	●Capacity indicator
●13	●LCD	●	●
●14	●LCD Key	●	●
●15	●switch	●	●
●16	●Bracket	●	●
●17	●Handle	●	●

3.3.SOC Indicator & Status Indicator Guides

● Chart 1: Battery Status

Status	Normal/ Warning/ Protection	RUN	ALM	Capacity LED						Description	
		●	●	●	●	●	●	●	●		
Shut Down	Shut down	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	All OFF
Standby	Normal	Flash	OFF	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Standby
Charge	Normal	ON	OFF	Based on capacity							
	Warning	ON	Flash								
	Protection	ON	ON								
Discharge	Normal	ON	OFF	Based on capacity							
	Warning	ON	Flash								
	Protection	OFF	ON								OFF
Fault	Protection	OFF	ON	OFF	OFF	OFF	OFF	OFF	OFF	OFF	Stop charging or discharging

● Chart 2: Battery Capacity

Status		Charging						Discharging					
Capacity LED Indicator		L6	L5	L4	L3	L2	L1	L6	L5	L4	L3	L2	L1
Capacity	0~16.6%	OFF	OFF	OFF	OFF	OFF	Flash	OFF	OFF	OFF	OFF	OFF	NO
	16.6~32.2%	OFF	OFF	OFF	OFF	Flash	ON	OFF	OFF	OFF	OFF	NO	NO
	32.2~49.8%	OFF	OFF	OFF	Flash	ON	ON	OFF	OFF	OFF	NO	NO	NO
	49.8~66.4%	OFF	OFF	Flash	ON	ON	ON	OFF	OFF	NO	NO	NO	NO
	66.4%~83%	OFF	Flash	ON	ON	ON	ON	OFF	NO	NO	NO	NO	NO
	83%~100%	Flash	ON	ON	ON	ON	ON	NO	NO	NO	NO	NO	NO
RUN Status ●		ON						Flash					

3.4.Connectors

Charge / Discharge connectors: to connect the positive pole (+) and negative pole (-) from the battery to the inverter via DC isolator.

RS485: Active communication portal between battery and inverter.

USB To RS232: to get dynamic monitoring data of the battery from upper computer.


Address: Reserved Address portal for multiple parallel connections.

3.5.Wake Up button

- Switch on: When battery is shut down, press the ON/OFF button for 3 seconds. It is activated when the LED lights flicker from RUN light to the lowest capacity indicator.
- Switch off: When battery is activated, press the ON/OFF button for 3 seconds. It will be shut down when the LED lights flicker from lowest capacity indicator to RUN light.
- RESET Key: Press RST key for 6 seconds, reset BMS, then clear all abnormal states; Press RST key for 3 seconds, with shutdown and boot function;

3.6.Display function instruction

3.6.1. Reference of real figure

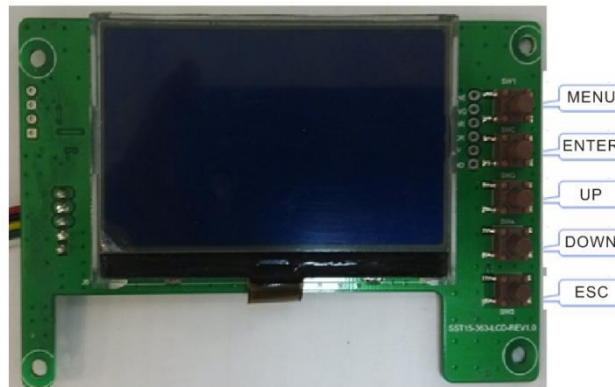

3.6.2.Display rendering






3.6.3.Functional Specifications



- Interface introduction
- Main menu page
- Electricity/dormancy activated, will show the welcome screen, press the MENU button to enter the main menu page. As shown in the figure below:




- Battery parameters collection page
When the cursor“>>” is point to “Battery Parameters Acquisition”, press ENTER key will enter into the page of“Battery Parameters Acquisition”, As shown in the figure below:

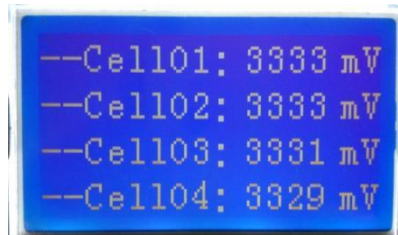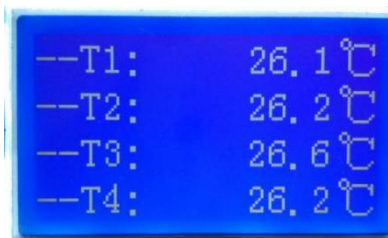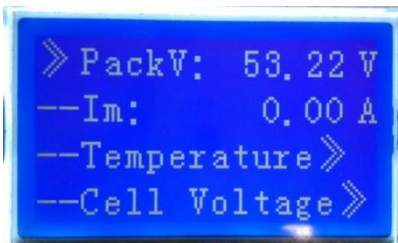


- Battery status page
When the cursor “>>” is point to“Battery Status”, press ENTER key will enter into the page of “Battery Status”, As shown in the figure below:

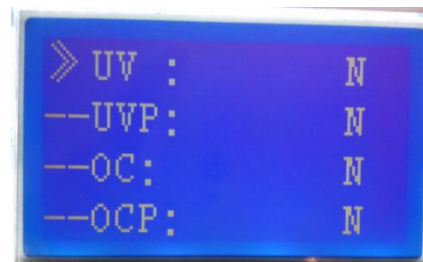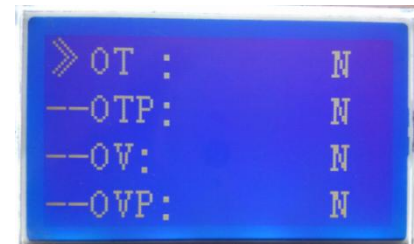

- Parameter Settings
Screen can not set parameters

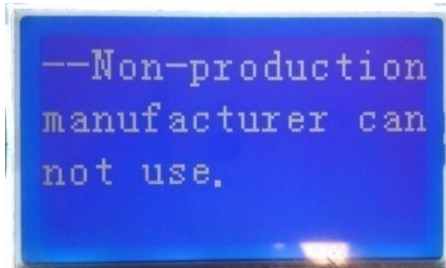


- System Settings Page
Baud Rate: 9600 do not set

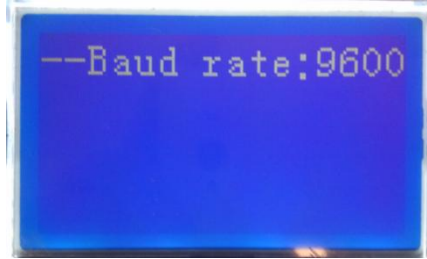

- Key description
 - 1) SW1----NEMU, SW2----ENTER, SW3----UP, SW4----DOWN, SW5----ESC.
 - 2) Each item is “»” or “--” as a beginning, among them “»” shows the current cursor position; press UP or DOWN key can move the cursor position; with “»” end of the project, the content of the said project has not shown, press ENTER key can enter the corresponding page.
 - 3) Press ESC key can be returned at the next higher level directory; In any position, press NEMU key can return to the main menu page.
 - 4) In a dormant state, press any key, can activate the screen.
- Dormancy/shutdown
Under normal operation condition, with no keystrokes 1 minutes later, system will enter a state of dormancy/shutdown.
Shutdown/dormancy state, press any key, screen can be activated.

4.Safe handling guide

4.1.System Diagram

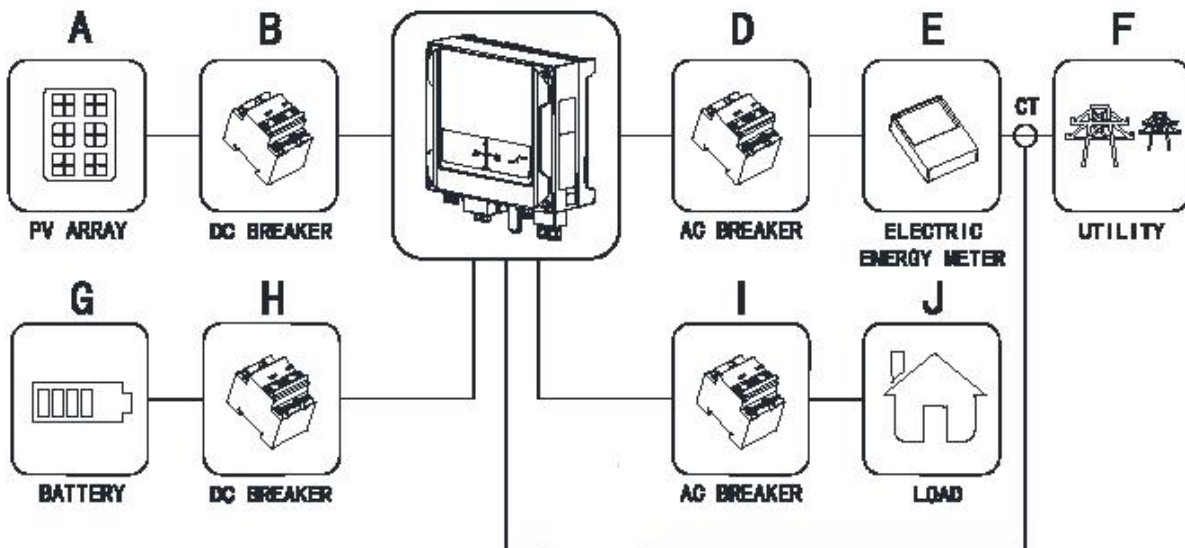

Tools

The following tools are required to install the battery pack:

- Wire cutter
- Crimping Modular Plier
- Screw Driver

Note:

- Use properly insulated tools to prevent accidental electric shock or short circuits.
- If insulated tools are not available, cover the entire exposed metal surfaces of the available tools, except their tips, with electrical tape.

4.2.Safety Gear


It is recommended to wear the following safety gear when dealing with the battery pack:

- Insulated gloves
- Safety goggles
- Safety shoes

5.Installation

5.1.Inventory of items

Thoroughly inspect the packaging upon receipt of goods. If there is any item that is missing or if there is any damage to the external packaging or to the unit itself upon unpacking, please contact Sapphire Solar immediately.

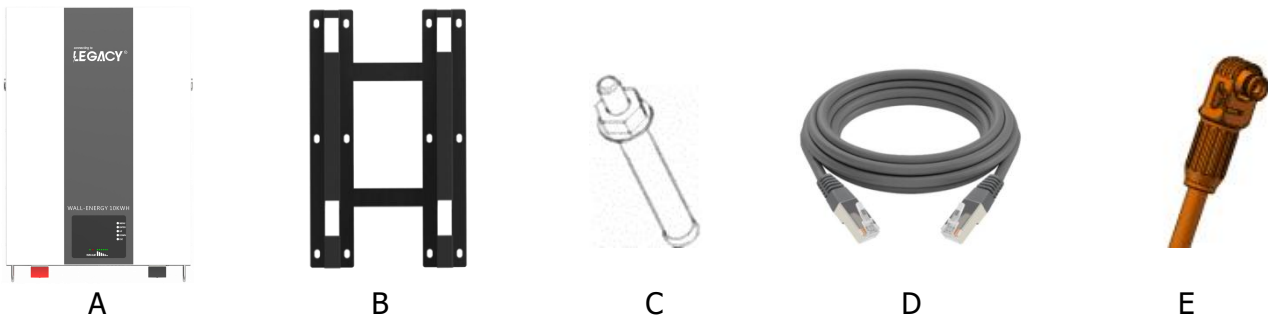


NO.	Item	Quantity	Specification
A	Battery Pack	1	5KWH/10KWH
B	Mounting frame	1	SPCC
C	Mounting frame screw	12	M8*60
D	Communication cable	1	Length:1.0m cat 5;1.5m USB type A to RJ11
E	Power connecter	2	125A/1000V
H	Instruction manual/Warranty Card	1	This document

5.2.Installation Location

Make sure that the installation location meets the following conditions:

- The installation site must be suitable for the size and weight of the battery.
- Must be installed on a firm surface to sustain the weight of battery.
- The area is water proof.
- There are no flammable or explosive materials in proximity
- The ambient temperature is within the range from 0°C to 45°C.
- The temperature and humidity is maintained at a constant level.
- There is minimal dust and dirt in the area.
- Installation must be vertical or tilted backwards by maximum 15° - avoid forward or sideway stilt.

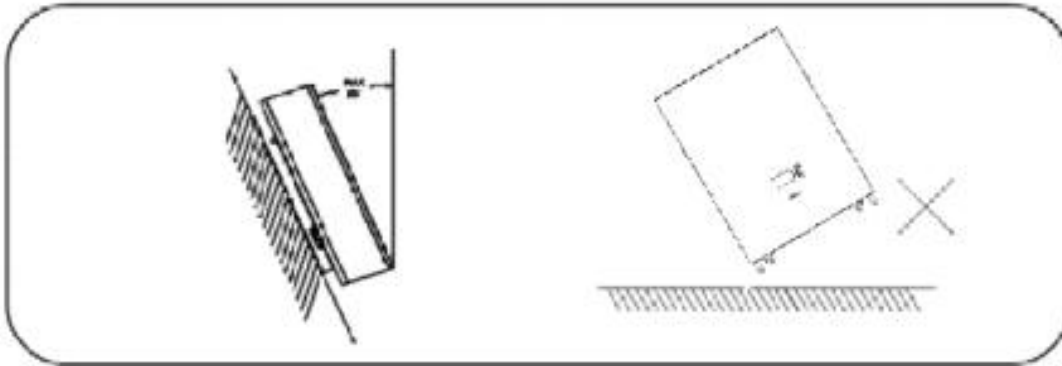


! CAUTION

If the ambient temperature is outside the operating range, the battery pack stops operating to protect itself. The optimal temperature range for the battery pack to operate is 0°C to 45°C. Frequent exposure to harsh temperatures may deteriorate the performance and life of the battery pack.

5.2.1. Minimum clearances

Observe the minimum clearances to walls, other batteries or objects as shown in the diagram and picture below in order to guarantee sufficient heat dissipation

Direction	Minimum clearance (mm)
Above	300
Below	300
Sides	500
Front	300

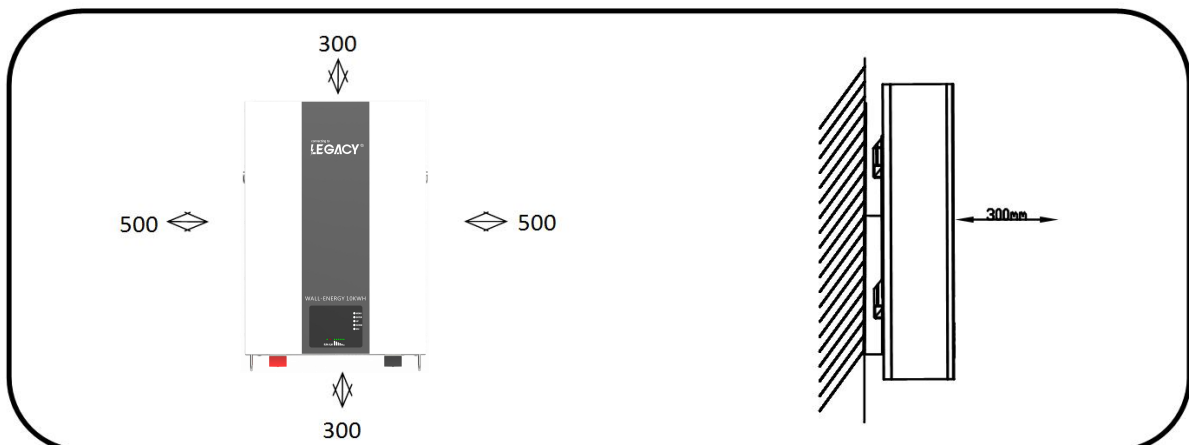

5.3.Installing the Battery Pack


5.3.1.Mounting to a wall



WARNING

In order to avoid electrical shock or other injury, inspect existing electronic or plumbing installations before drilling holes. The battery is heavy, please handle with care to avoid damage to the product or injury to the installer.

- 1.Choose suitable firm wall with thickness greater than 80mm.
- 2.Use the mounting frame as a template, mark the hole position.
- 3.Drill 8 holes according to the hole position, it is $\varnothing 10$ with depth 60mm.
- 4.Hammer the M8 screws to the above holes, and screw the nut. Note: Do not position screws flush to the wall - leave 10 to 20 mm exposed.
- 5.Fix the mounting frame to the 8 screws.
- 6.Raise the battery a little higher than the mounting frame whilst maintaining the balance of the battery. Hang the battery on the frame through the match hooks.

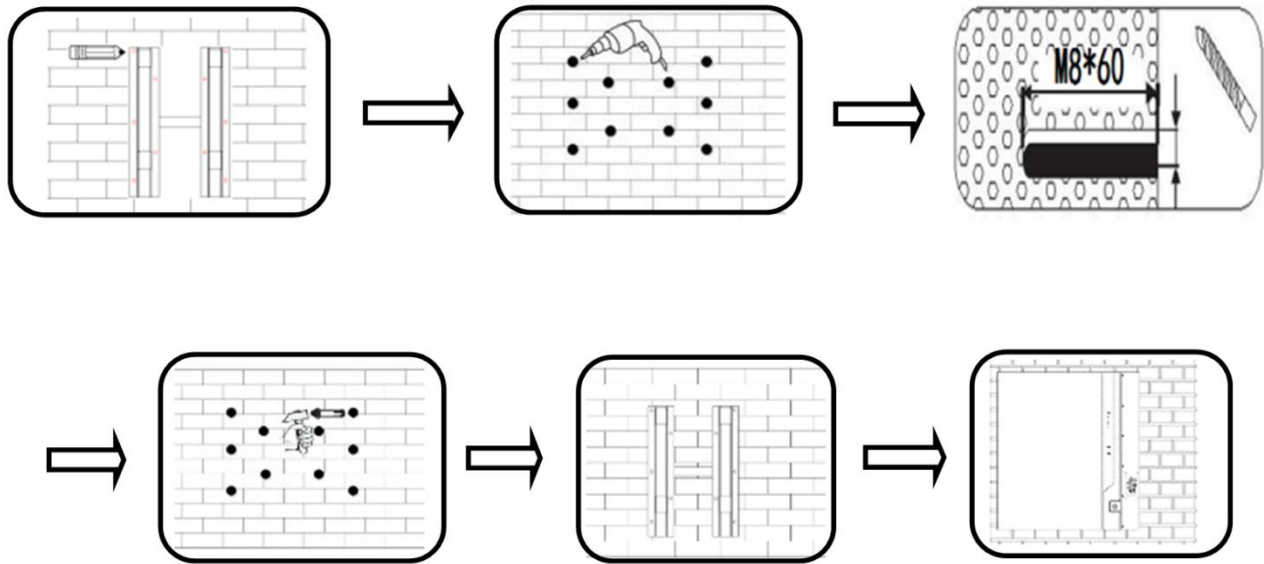

WARNING

Falling equipment can cause serious or even fatal injury; never mount the inverter on the bracket unless you are sure that the mounting frame is firmly mounted on the wall after thorough checking.


5.4.Parallel use of battery

When the battery needs to be used in parallel, the maximum connection is 10units, but we recommend to use 2-4 units according to application. The application needs power and communication connections as below, choose suitable accessories:

5.4.1. Power connection

Let's take 4 batteries for example, use an additional junction box (not included in the standard pack) to combine the power flow of both batteries:

Combiner box

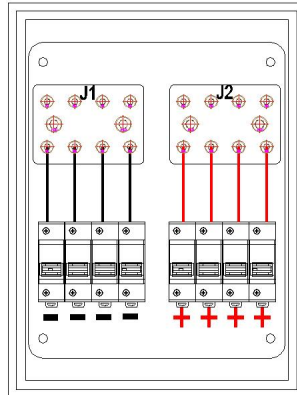


7. Please refer to the figure below to connect the positive output line A.C.E.G. of the battery terminal and the negative output line B.D.F.H of the battery terminal.

8. The other end of the battery, A.C.E.G., is connected to the leakage switch of the combiner box. The negative B.D.F.H is connected to the leakage switch of the combiner box.

9. Connect J1 with inverter's negative pole


10. Connect J2 with inverter's positive pole

11. Add suitable isolators when necessary

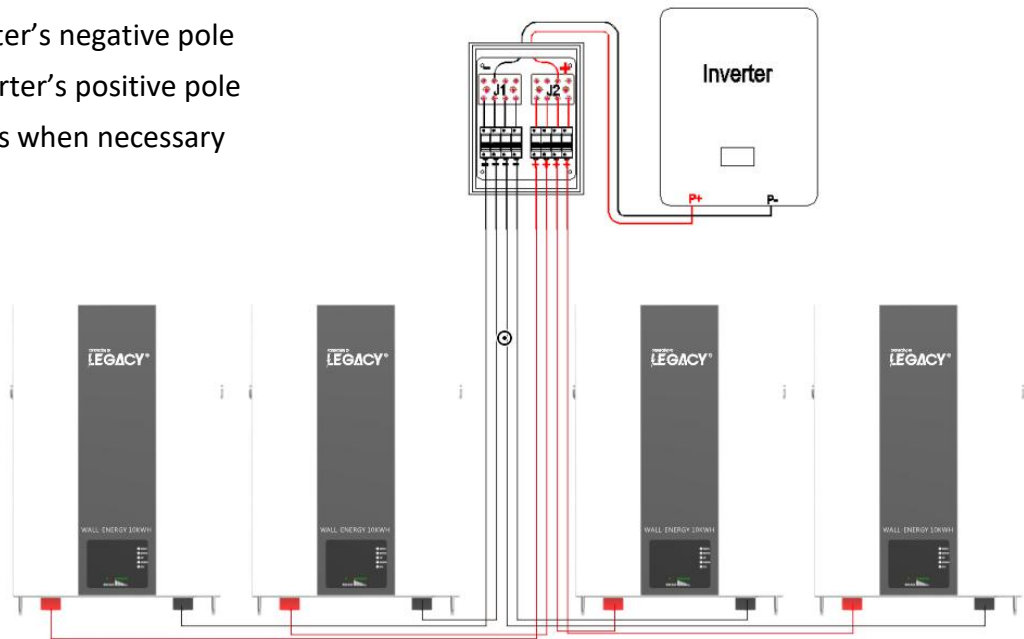


6. Communication

6.1. Battery and PC communication (note: insert the RS232 port)

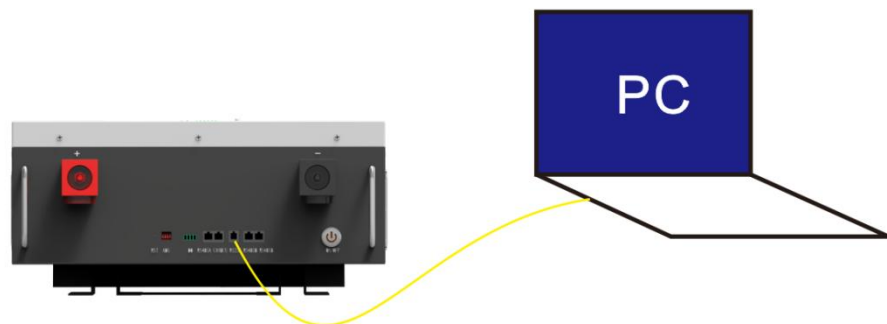


6.2.How To Connect Inverter


6.2.1.The communication PIN of battery and the inverter:

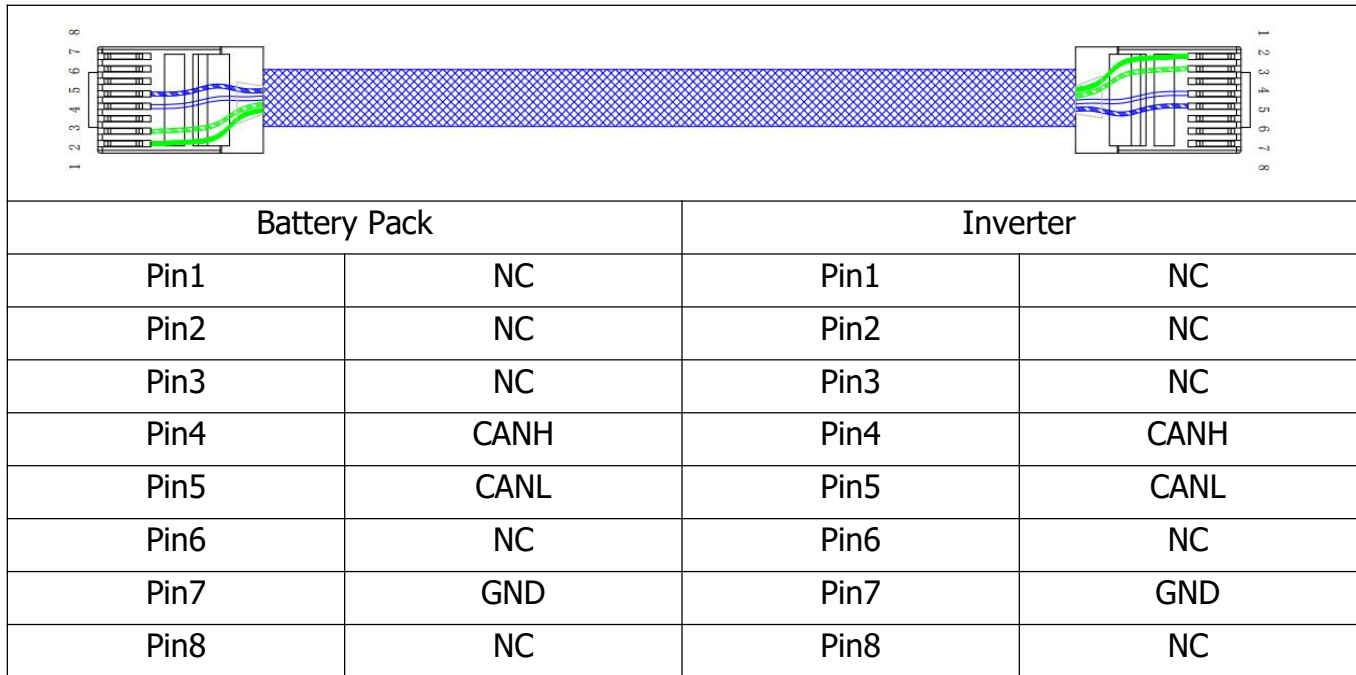

6.2.2.Dial settings of battery ADS address:


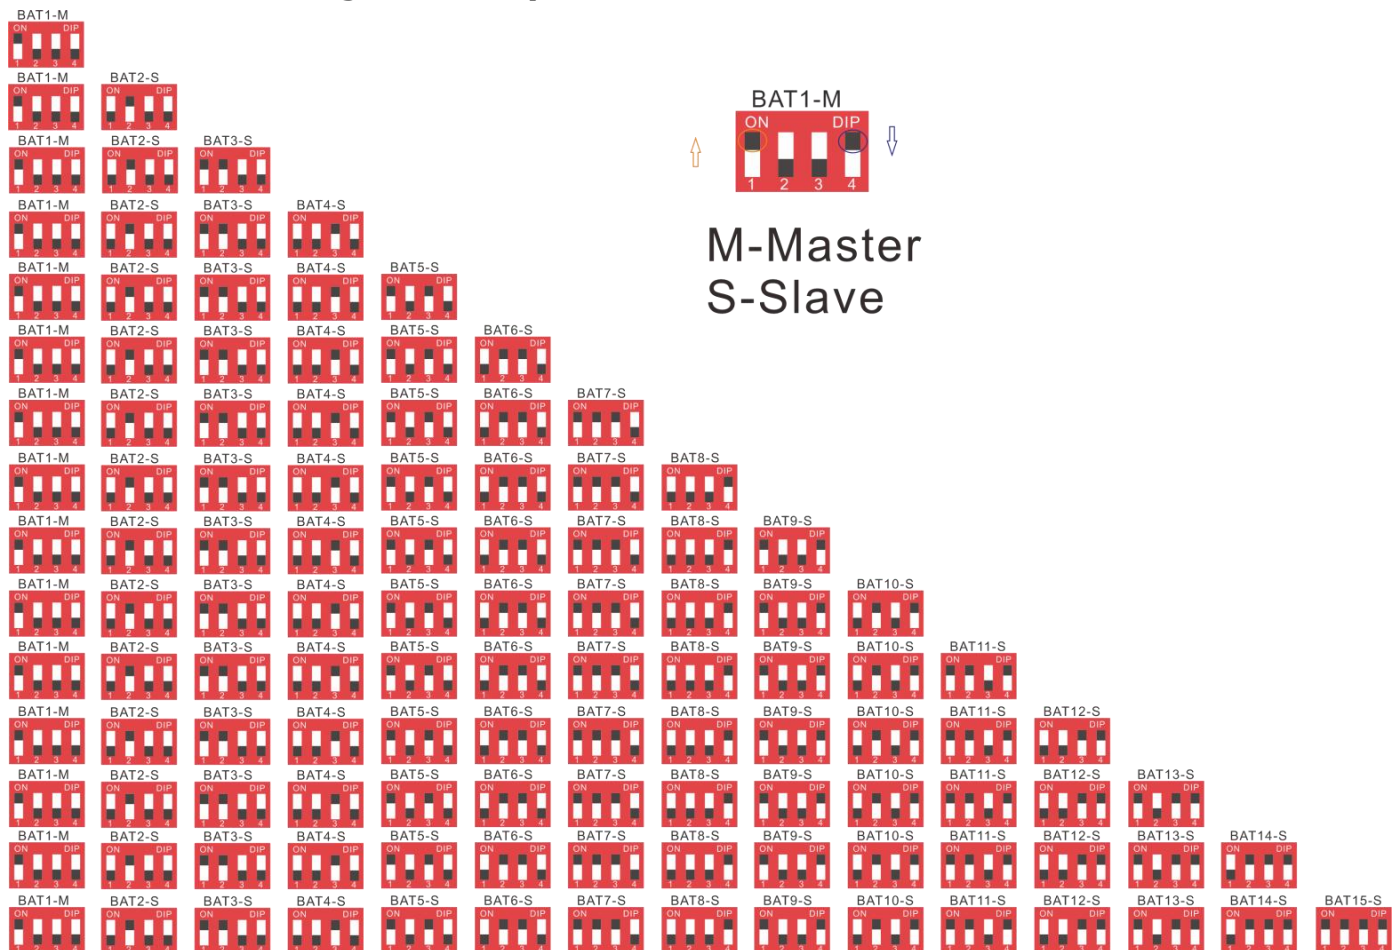


6.2.3. How to connect Deye inverter:

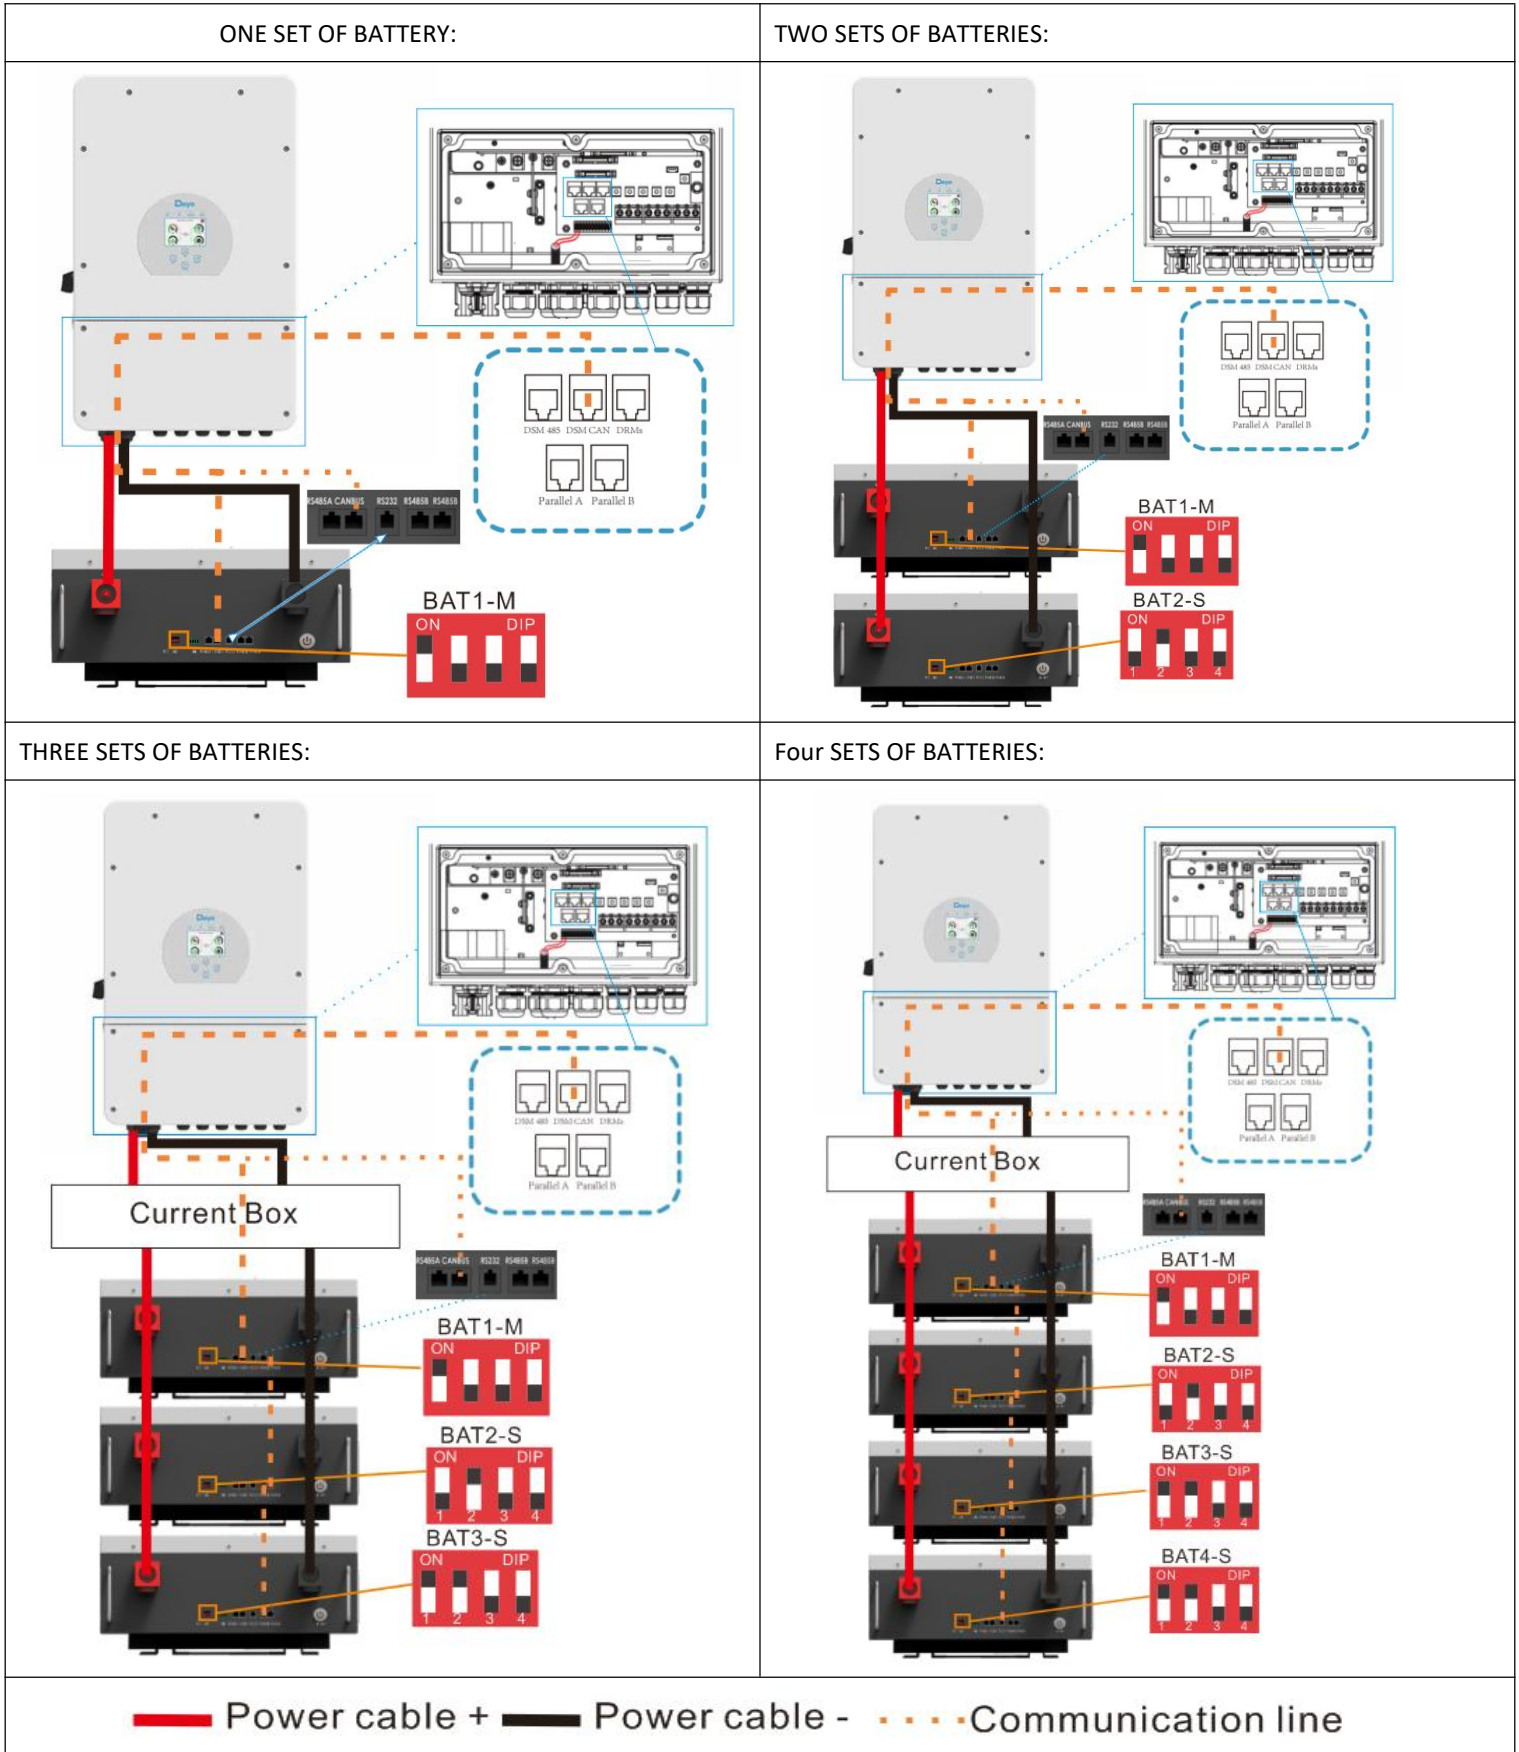


6.2.3.1 The communication setting steps of the inverter:

1) Click on "Setting" on the lcd:

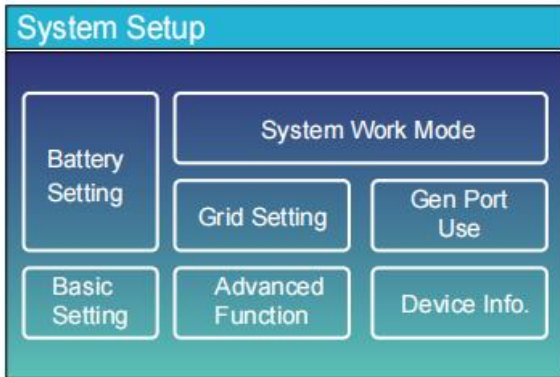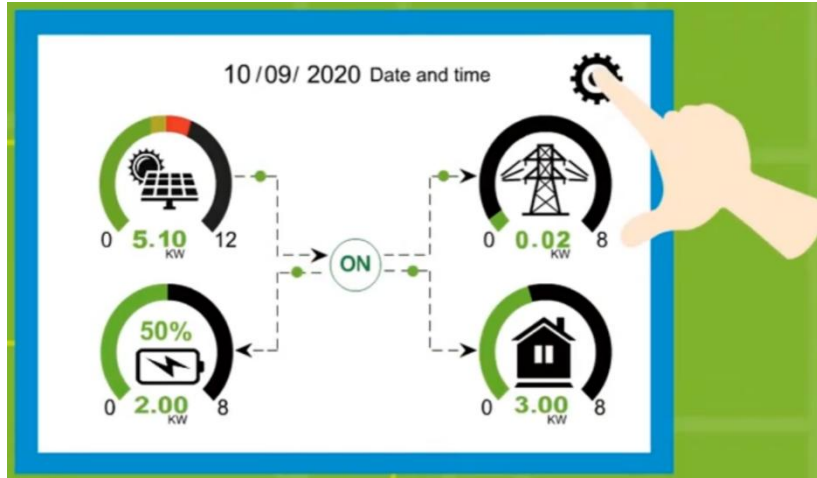

This is System Setup page.

2) Click on "Battery setting", select "Lithium" as the battery mode:

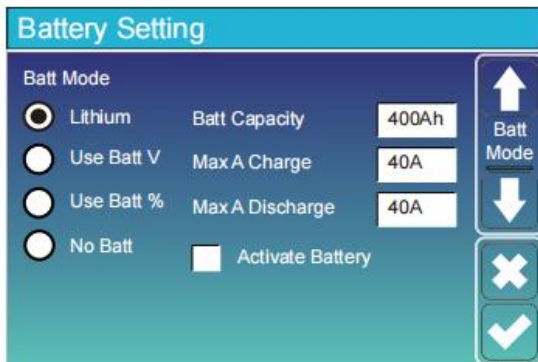


Lithium Battery
 Batt Mode----- Lithium
 Max A charge----- 0-120A
 Max A Discharge-----0-120A
 Activate Battery-----Enable

AGM Battery
 Batt Mode----- Use Batt V or Use Batt V%
 Batt Capacity----- 50-2000Ah
 Max A charge----- 0-120A
 Max A Discharge-----0-120A
 Activate Battery -----Enable



No Batt --- No need to set other parameters, keep the default value.

3) Lithium mode select: 00:

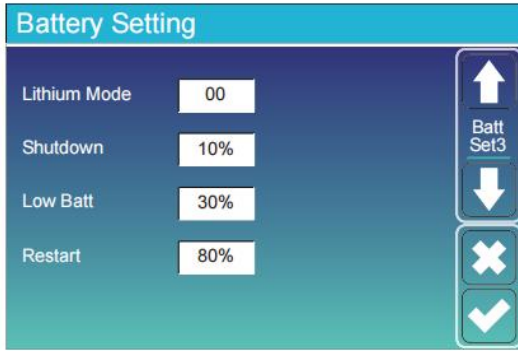


Lithium Mode--This is BMS protocol.Please reference the document (Approved Battery-Deye) .
 Shutdown 10%--It indicates the inverter will shutdown if the SOC below this value.
 Low Batt 20% --It indicates the inverter will alarm if the SOC below this value.
 Restart 40% --It indicates the restart level when inverter shutdown.


4)After lithium mode connected successfully, BMS will upload the data as below:

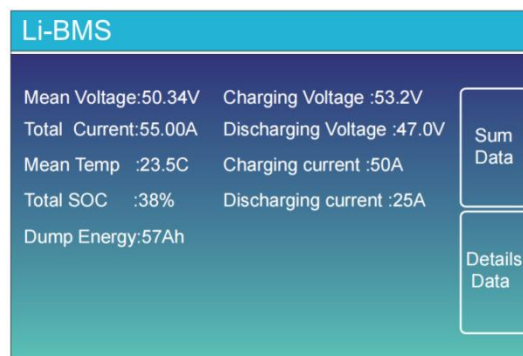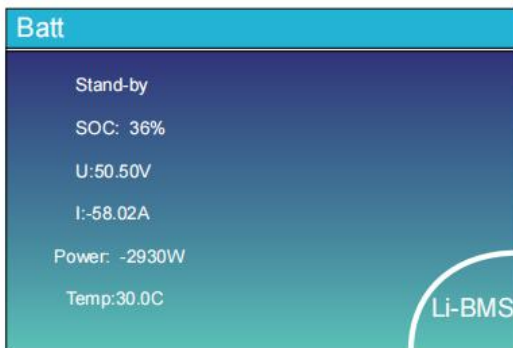

6.2.4 How To Connect Growatt Inverter

6.2.4.1 “Canbus” communication setting of the inverter:

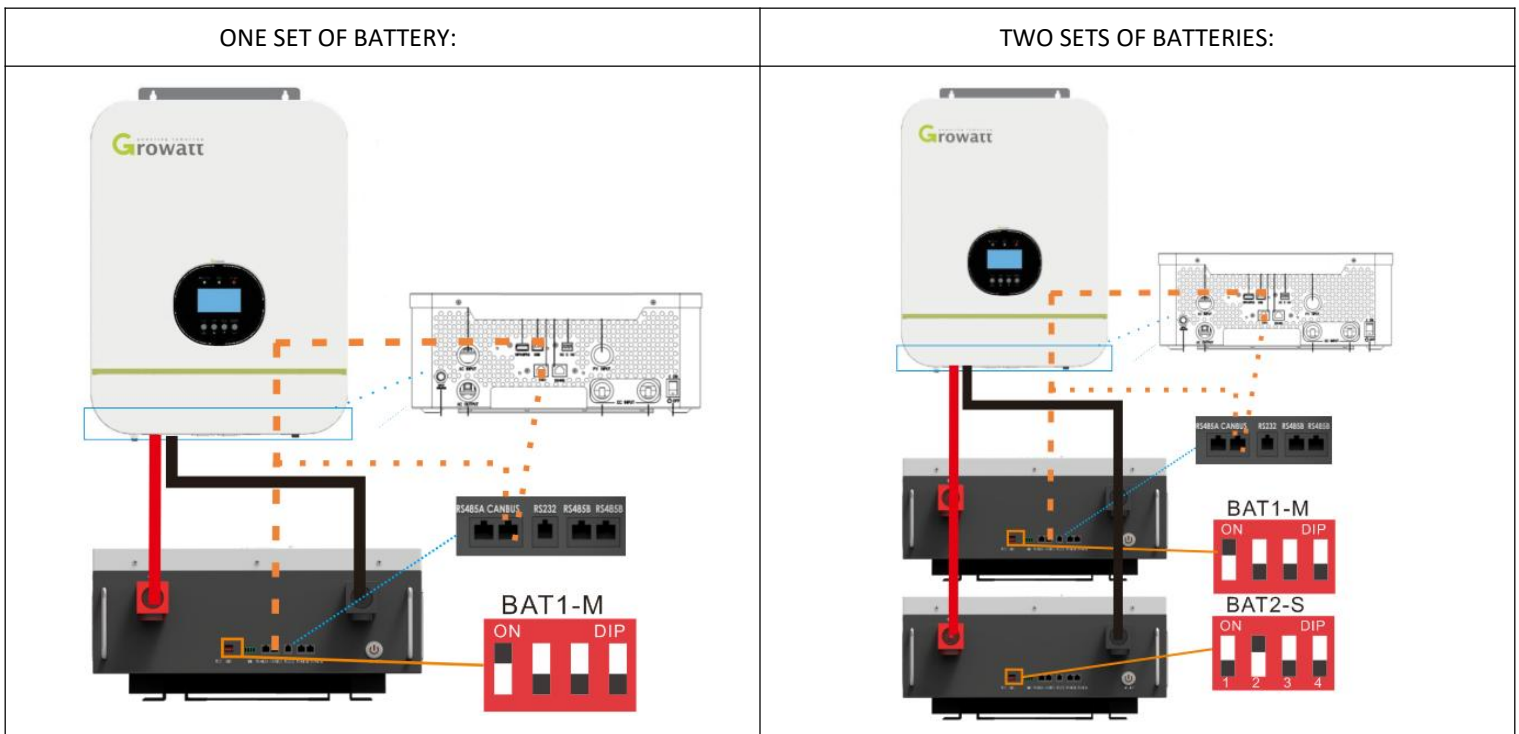

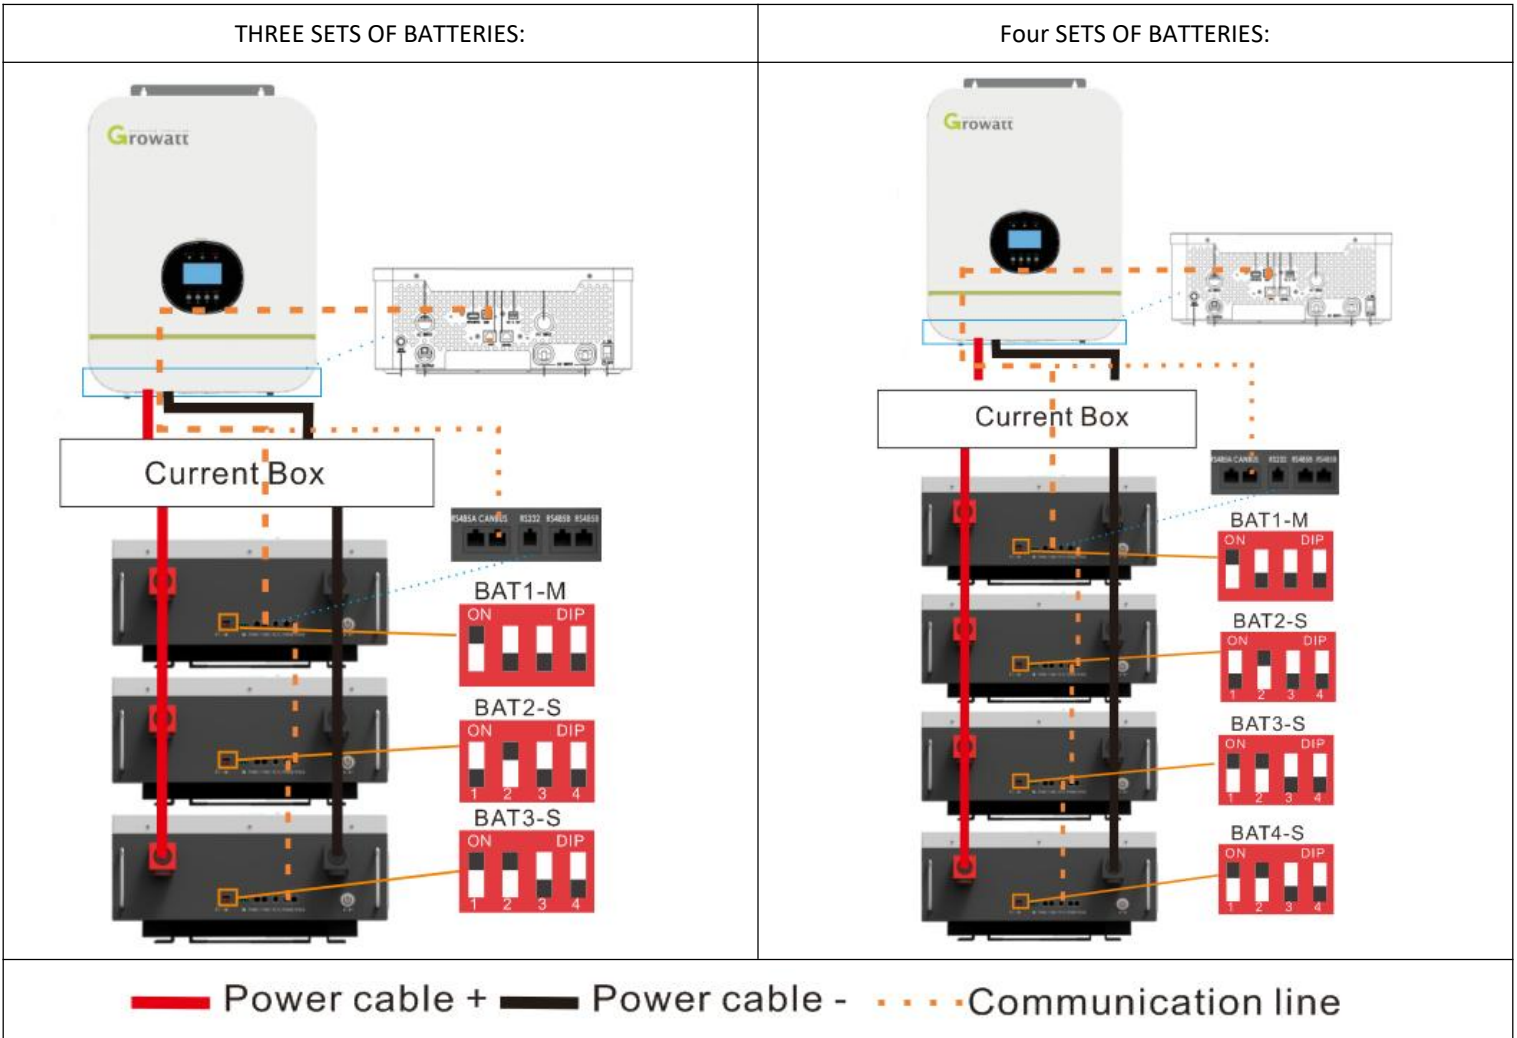

6.2.4.1.1 Can-bus communication setting steps of the inverter:

1)LCD setting as below:



2) Click on "Battery setting", select "Lithium" as battery mode:



05	Battery type	AGM (default)	bAtE AG 005
		Flooded	bAtE FLd 005
		Lithium (only suitable when communicated with BMS)	bAtE LI 005
		User-Defined	bAtE USE 005
<small>If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 19, 20 and 21.</small>			
<small>User-Defined 2 (suitable when lithium battery without BMS communication)</small>			
<small>bAtE US2 005</small>			
<small>If "User-Defined 2" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 19, 20 and 21. It is recommended to set to the same voltage in program 19 and 20 (full charging voltage point of lithium battery). The inverter will stop charging when the battery voltage reaches this setting.</small>			

3) Click on "Enter" and "Down/Up" to select "36" and "L52":


	CAN Communication protocol	Protocol 51	PtCL L51 036
		Protocol 52	PtCL L52 036
		.	.
		Protocol 99	PtCL L99 036



4) Click on "ESC", and wait till the connection done.



6.2.4.2 "RS485" communication setting of the inverter:

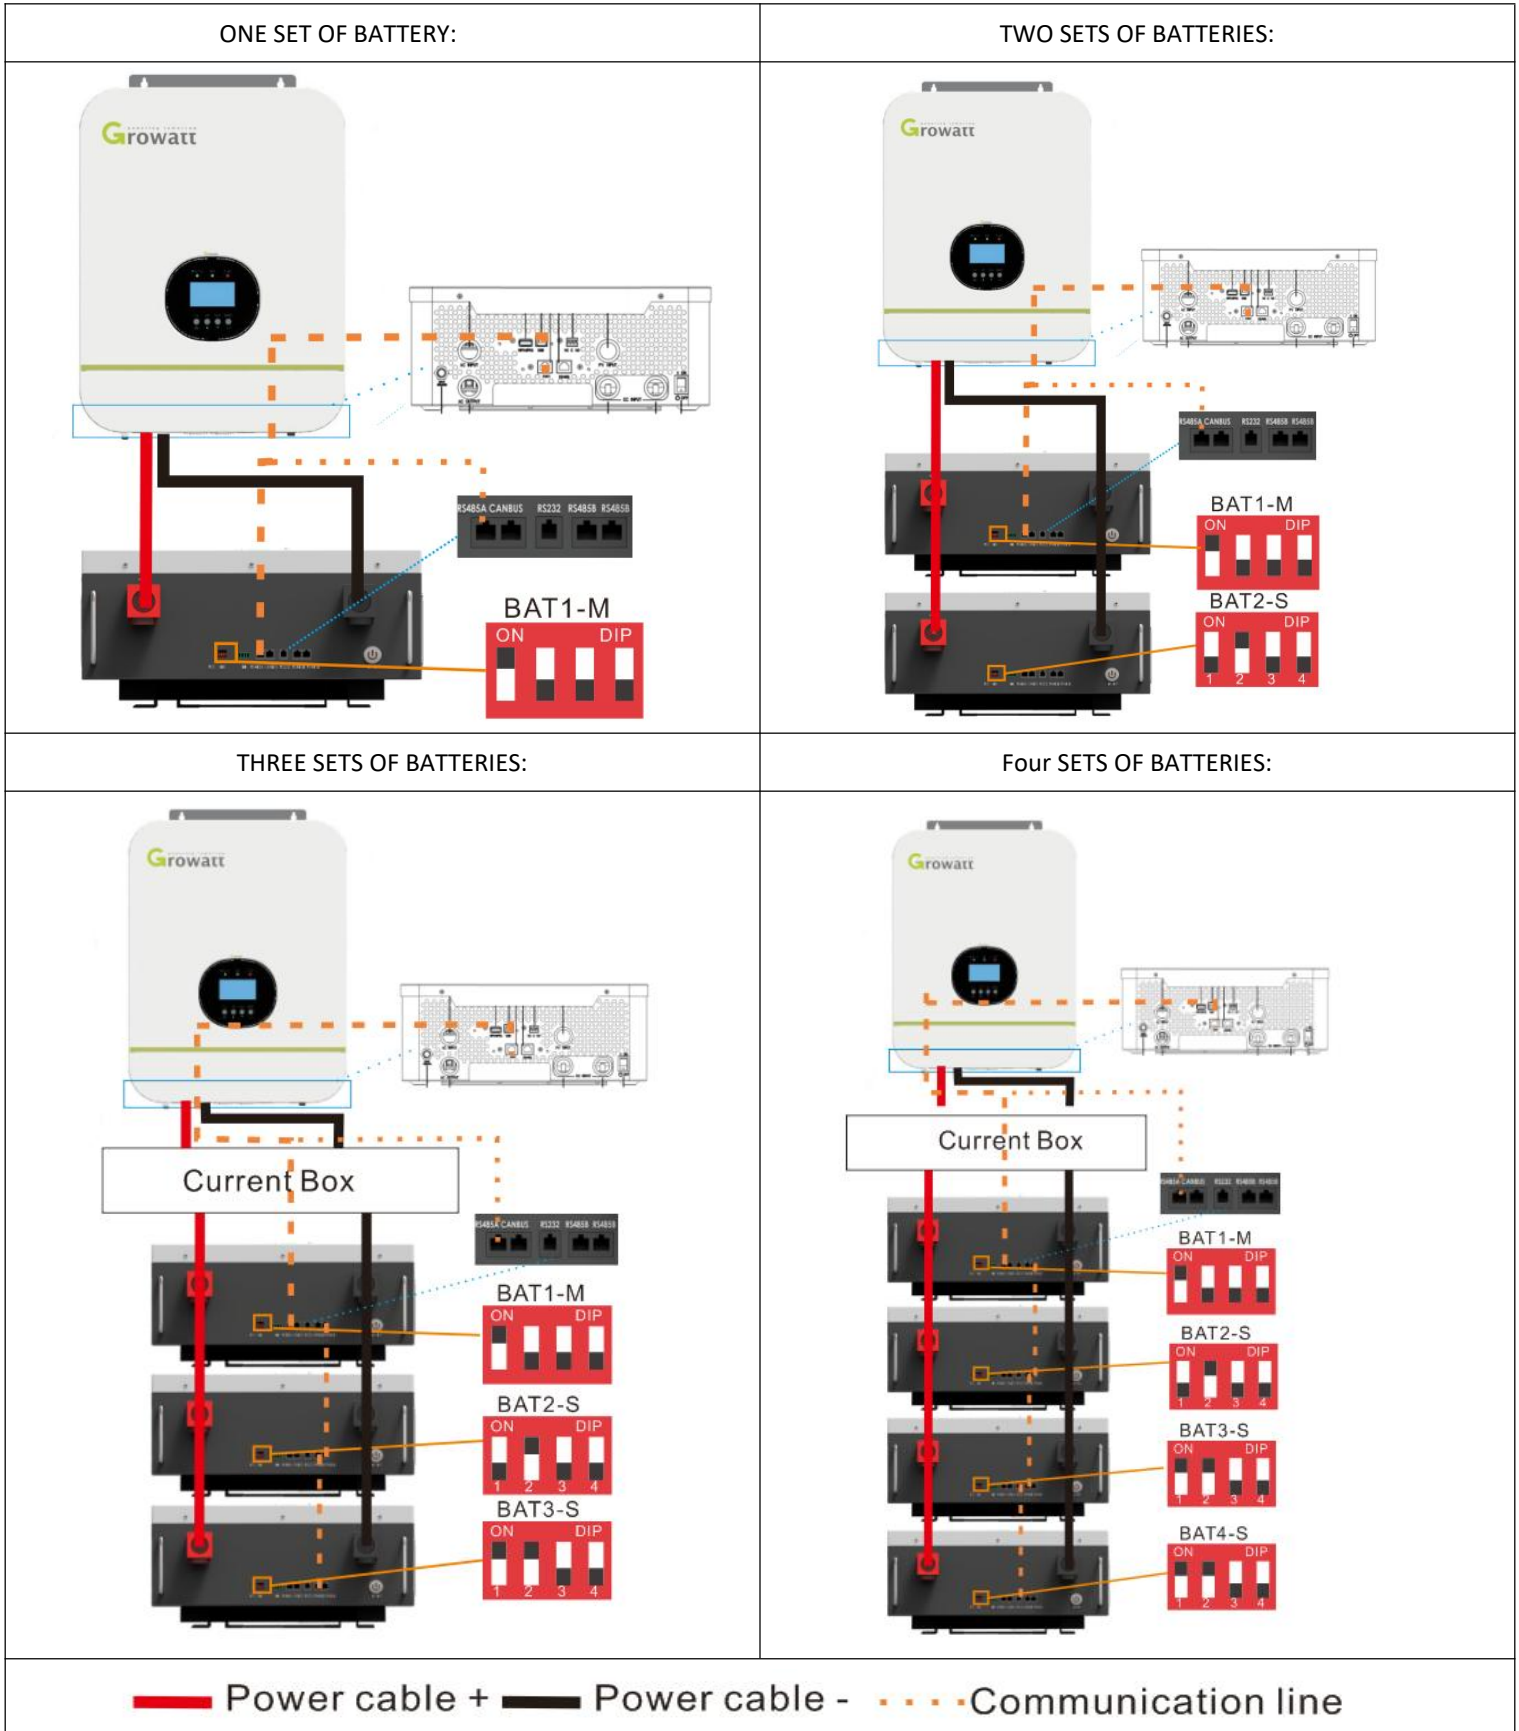

6.2.4.2.1 “RS485” communication setting steps of the inverter:

1) Lcd setting as below:



2) Click on “Enter” and “Down/Up” to select “05 ” and “LI” (Lithium mode) :



05	Battery type	AGM (default)	BATT AGM 005
		Flooded	BATT FLD 005
		Lithium (only suitable when communicated with BMS)	BATT LI 005
		User-Defined	BATT USE 005
		User-Defined 2 (suitable when lithium battery without BMS communication)	BATT US2 005

If "User-Defined" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 19, 20 and 21.
If "User-Defined 2" is selected, battery charge voltage and low DC cut-off voltage can be set up in program 19, 20 and 21. It is recommended to set to the same voltage in program 19 and 20(full charging voltage point of lithium battery). The inverter will stop charging when the battery voltage reaches this setting.

3) Click on “Enter” and “Down/Up” to select “36” and “L04”:

36	RS485 Communication protocol	Protocol 1	PtCL L01 036
		Protocol 2	PtCL L02 036
		.	.
		Protocol 50	PtCL L50 036



4) Click on "Esc", and wait till the connection done.



7. Abnormal situation handling

Fault phenomenon	Cause of issue	Approach
Inverter cannot be turned on	AC input failure	Check if the AC input switch is closed Check if the line is open
Abnormal communication	PC TAHCannot read device information	Whether the device is turned on Is the PC software used correctly? Whether the PC software correctly reads the serial port Signal line wiring and address are correct
Equipment overload	Excessive power or short circuit	Check if the load is less than the rated power of the device Confirm if there is a short circuit condition
Battery failure	Fault light (red light) is always on	Press the SET button 6S, all the indicators light up at the same time, release the SET button, if it can not be solved, please contact the manufacturer
Inverter failure	System operation error	Disconnect the load and reboot

8. Product Responsibilities and Consulting

- 1) We will not be liable for the accidents resulting from operation breaking this specification and user manual.
- 2) We will not send separate notice, provided that the contents of this specification are changed due to improvement of product quality or technological upgrading; provided that you want to understand the latest information of this product, please contact us.
- 3) The shelf life of this product is within 5/10 Years after it is delivered; we will maintain the product, which is in the warranty period for free of charge, provided that it has any product quality problems within the specified operation range; we may replace the relevant parts, if we fail to maintain it, so as to achieve the purpose of sustainable use without performance reduction; our after-sales service personnel will propose the specific maintenance and troubleshooting methods.

THANK YOU FOR CHOOSING LEGACY
LET'S DEVELOP TRUST AND BUSINESS